


Power Failures or Fill Failures

Fill Valve Bypass

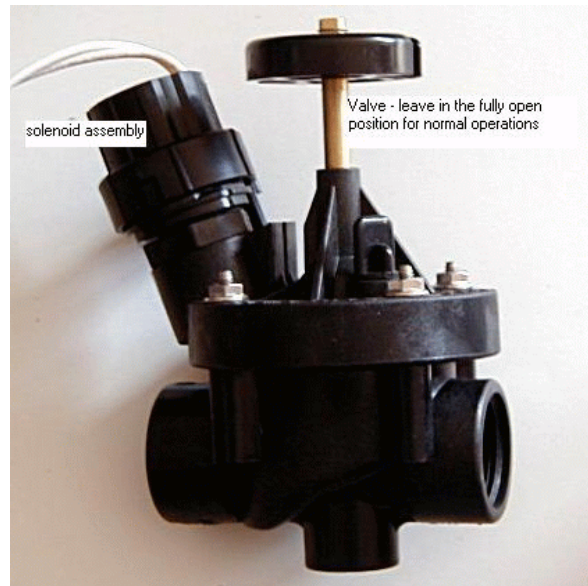

If the solenoid valve can still be used as a manual valve. Release the locking clip on the solenoid by lifting up on it. Unscrew the solenoid by turning it one half turn only, in a counter clockwise direction. This will allow water to flow. You can use the knob to regulate the flow or shut off flow.

If the power fails during a **FILL** or a **DELAY FILL** and you manually fill the resurfacer until it overflows, the control unit will be in the **IDLE** mode when the power is restored. Also these cycles can be canceled by using the proper cancel buttons (refer to instructions).